EAS31384

REMOVING THE FUEL TANK COVERS

1. Remove:
   - Fuel tank front cover
   - Front side panel
   - Front side cowling
2. Remove:
   - Passenger seat
   - Rider seat
3. Remove:
   - Fuel tank cover (left) “1”

▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼

a. Remove the fuel tank cover bolt “2”
b. Disengage portion “a”, and then remove the fuel tank cover by sliding it in the direction shown in the illustration.

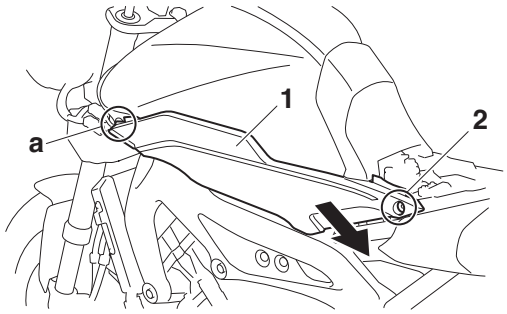

▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

4. Remove:
   - Fuel tank cover (right) “1”

▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼

a. Remove the fuel tank cover bolt “2”
b. Disengage portion “a”, and then remove the fuel tank cover by sliding it in the direction shown in the illustration.

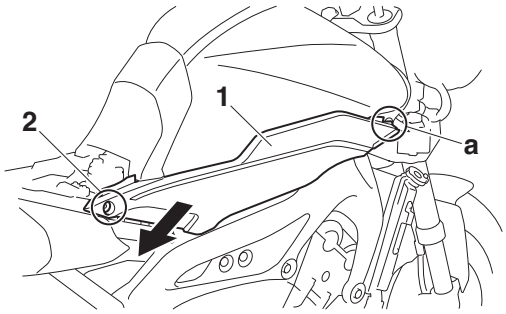

▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

EAS31385

INSTALLING THE FUEL TANK COVERS

1. Install:
   - Fuel tank cover (left) “1”

▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼

a. Insert the slot “a” into the projection “b”, and then install the fuel tank cover as shown in the illustration.

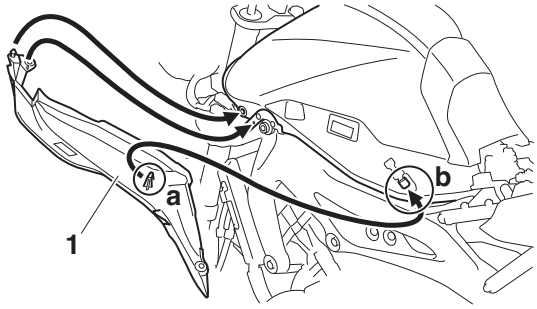

b. Install the fuel tank cover bolt “2”, and then tighten the bolt to specification.

	**Fuel tank cover bolt** **4.0 Nm (0.40 m·kgf, 2.9 ft·lbf)**

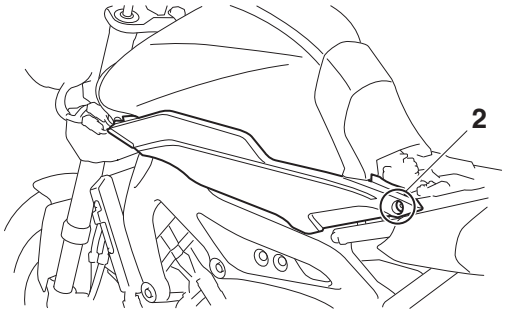

▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

2. Install:
   - Fuel tank cover (right) “1”

▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼▼

a. Insert the slot “a” into the projection “b”, and then install the fuel tank cover as shown in the illustration.

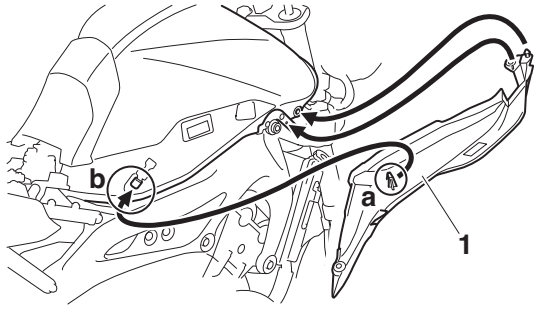

b. Install the fuel tank cover bolt “2”, and then tighten the bolt to specification.

	**Fuel tank cover bolt** **4.0 Nm (0.40 m·kgf, 2.9 ft·lbf)**